













| NO | |
|------|--------------------------------------|
| ZK A | R = Discharge A = Use P = Pump |

| | Α | Max flow rate | Level of vacuum | | Reaction time | | Mouth | Cross-section of | F | Weight |
|-------------|-----|---------------|-----------------|-----|---------------|-----------|-------|------------------|-----|--------|
| Item | | | abs. mbar | | ar msec | | | passage | | |
| | Ø | m³/h | min | max | energ. | de-energ. | Ø | mm² | Ø | Kg |
| 07 05 40 NC | G1" | 90 | 850 | 0.5 | 38 | 18 | 25 | 490 | 6.5 | 1.91 |
| 07 05 40 NO | | | | | 25 | 20 | | | | |

Note: The coil and the connector are not integral parts of the solenoid valve and, therefore, must be ordered separately (See accessories for solenoid valves).